

ADDING SENTRY360 CAMERAS TO ARTECO LOGIC-NEXT.

TECH TIP Ver. 4.0.1

DESCRIPTION: This tech tip is intended to describe when a sentry360 camera should be added as "Sentry360" and when it should be added as "Sentry-2".

IMPORTANT: This Tech Tip applies to ARTECO Server with ARTECO LOGIC-NEXT and is not intended or advised to be used with any other version of ARTECO Server.

The following models should be added as "Sentry360"

- FS-IP5000-DN
- FS-IP10K-DN
- FS-IP10K
- FS-IP14K
- FS-IP14K-DN
- FS-IP5000
- IS-IP500
- IS-IP10K-DN
- IS-IP10K
- IS-IP500-DN

The following camera models should be added as "Sentry-2"

- FS-IP3000-M
- FS-IP5000-M
- IS-IP200-DN
- IS-IP290
- IS-DM520 HB
- IS-DM520-IR
- IS-DM320-HB
- IS-DM320-IR
- IS-DM240
- IS-DM240-V
- IS-DM220-IR
- IS-DM220-HB
- IS-DM220
- IS-DM260-R
- IS-DM260
- IS-IP220-IRB-30
- IS-IP200-IRB