

arteco
PURE

2 AÑOS
de asistencia
GRATUITOS

Esencial, simple y eficaz: Arteco Pure es el software perfecto para monitorear sitios o infraestructuras de tamaño pequeño. Gracias a su interfaz clara e intuitiva es posible gestionar hasta 20 cámaras en modo mono-servidor.

Con su capacidad de controlar cámaras PTZ y codificadores, Pure convierte las viejas instalaciones analógicas a sistemas digitales e innovadores, accesibles por medio de nuestro Cliente, tanto con el ordenador como con el navegador en dispositivos móviles.




Ideal para sitios o
infraestructuras
de tamaño pequeño



Se pueden gestionar
hasta 20 cámaras
en modo mono-server



Accesible en cualquier
lugar con ordenadores
y dispositivos móviles

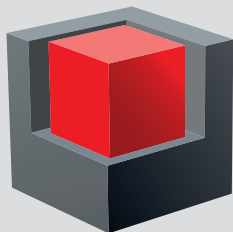

ARTECO PURE

CARACTERÍSTICAS PRINCIPALES

Pure Analytics

Arteco Pure incluye herramientas de análisis video para la detección de movimiento: la solución perfecta para vigilar sobre tiendas y residencias que necesitan un medio inteligente y eficaz para proteger la seguridad de empleados y habitantes.

Gestión

La gestión del software puede ser local o remota con todos los ordenadores y dispositivos móviles empleando nuestro cliente Arteco Next, la aplicación iOS y Android y, finalmente, el navegador.

Almacenamiento de videos

El soporte de almacenamiento permite descargar archivos en dispositivos locales. El watermarking (marca de agua digital) da garantía de la originalidad y la imposibilidad del manipular las imágenes.

Perfiles de Usuarios

Se pueden activar tres perfiles según las competencias (Administrator, Power User, User).

Opcionales

Arteco Everywhere.

Compatible con ONVIF® (Profile S y G) y RTSP | Admite H.265, H.264, M-jpeg, Mpeg-4, 4K y UHD


REQUISITOS DE SISTEMA

Hardware

Intel® Core i3® o superior
Intel® Xeon® 3.0 GHz, 2 MB Cache, 800 MHz FSB o superior
4GB de RAM o superior
1x Gigabit Ethernet Network Interface Card

OS

Microsoft® Windows Vista SP1 Business or Ultimate 64-bit
Microsoft® Windows 7 Professional or Ultimate 64-bit
Microsoft® Windows 8.0/8.1 Professional or Enterprise 64-bit
Microsoft® Windows 10 Pro or Enterprise
Microsoft® Windows Server® 2003 Standard/Enterprise Edition SP1/SP2/R2 64-bit
Microsoft® Windows Server® 2008 Standard/Enterprise Edition SP2 64-bit
Microsoft® Windows Server® 2008 Standard/Enterprise Edition R2 64-bit
Microsoft® Windows Server® 2012 R2 64-bit
Microsoft® Windows Server® 2016 64-bit
Microsoft® Windows Server® 2019 64-bit

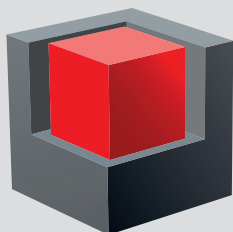

● standard ○ optional – not available

	Pure	eMotion	Active	Extreme
Server Features				
License Mix	–	○	○	○
Max Number of supported cameras per server	20	unlimited	unlimited	unlimited
Max Number of supported servers	1	3	unlimited	unlimited
Max Number of simultaneous connections (client, mobile, web)	5	unlimited	unlimited	unlimited
Max Number of users	unlimited	unlimited	unlimited	unlimited
Authentication with Microsoft Active Directory	●	●	●	●
Manage via Arteco App (ios and Android, free)	●	●	●	●
PTZ Control (incl. presets&sequences)	●	●	●	●
Multi Camera Playback (simultaneous playback of more than one camera)	●	●	●	●
Instant Replay	●	●	●	●
Event Notification	●	●	●	●
Event Search	●	●	●	●
Substream Support (Live&Recording)	●	●	●	●
Manage via Arteco Web Client	●	●	●	●
Audio IN (audio in support Live&Rec, Axis + Onvif)	●	●	●	●
Virtualization (upon request)	●	●	●	●
Streaming Recoder (hardware decoder @low-res)	–	●	●	●
Web Device (embedded browser)	–	●	●	●
External I/O + Input External State (receive and send HTTP/CGI scripts)	–	●	●	●
Record to network storage (NAS, SAN . . .)	–	●	●	●
Privacy Mask (blurred image, removable from recorded video by admin user)	–	●	●	●
Maps Supervisor	–	●	●	●
Customization of user right to access specific cameras (Camera Selection)	–	●	●	●
Customization of user role rights (User Policies)	–	●	●	●
RTSP Streaming Output (recoding and sending of video streams from the VMS to third parties)	–	–	●	●
Edge Storage	–	–	●	●
Audio IN/OUT (Live&Rec audio in and out management, available for ONVIF devices only)	–	–	●	●
Arteco Videowall	–	○	○	●
Server Failover (Server Redundancy)	–	–	○	●
Storage Failover (min 2 disks required; in case of disk failure, the system redirect recordings on a pre-configured disk portion, SPARE)	–	–	–	●
Auxiliary Path (simultaneous recording on 2 storage paths)	–	–	–	●
Analytics				
Motion Detection Pure (on/off)	●	●	●	●
Motion Detection eMotion (Basic filters)	–	●	●	●
Smart Search	–	●	●	●
Motion Detection Active (Advanced filters)	–	–	●	●
Plug In				
Arteco Everywhere Integration	●	●	●	●
CIAS Integration (Intrusion & Perimeter detection)	–	○	○	○
Contact ID Integration (Intrusion & Fire)	–	○	○	○
OMNIA VCA with Forensic search	–	–	–	○
OMNIA Face Factor	–	○	○	○
OMNIA LPR Server	–	○	○	○
Arteco LPR - Support for LPR native cameras (Tattile, Selea, . . .)	–	○	○	○
Arteco LPR - Support for Hikvision LPR and Targa System cameras (requires Arteco Gateway)	–	○	○	○
Arteco LPR - Hanwha Wisenet App (also available as stand alone)	–	○	○	○
Open Connector	–	●	●	●
Security Connector	–	○	○	○
Access Control Connector	–	○	○	○