

ACTIVE

2 AÑOS
de asistencia
GRATUITOS

Creado para sistemas de seguridad de tamaño medio-grande, **Active** es el VMS para la gestión de un número ilimitado de servidores, cámaras y dispositivos instalados en varios sitios: por eso Active es perfecto para vigilar sobre vastos sistemas localizados en variadas infraestructuras. Gracias a los mapas dinámicos y al análisis video avanzado, la búsqueda y la solución de eventos se vuelven muchos más simples y rápidas.

Active se adapta perfectamente a instalaciones en museos, hospitales, edificios públicos y centros de producción. Es indicado para salas de control y centros operativos que pueden ampliar el sistema Active con Artec Videowall para la gestión de eventos en vivo y un intercambio inmediato de datos y videos.



Pensado para
estructuras de ta-
maño medio-grande




Análisis de eventos
avanzada
y mapas dinámicos



Expandible con
Storage Failover
y Artec Videowall



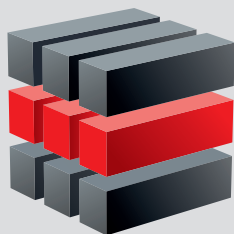

ACTIVE



CARACTERÍSTICAS PRINCIPALES

Centralización

La centralización permite vigilar con máxima eficacia sobre un número elevado de sitios y dispositivo desde una sola sede operativa.

Perfiles de Usuarios

Se pueden activar tres perfiles según las competencias (Administrator, Power User, User).

Análisis de video y Privacidad

Active está equipado con análisis de video avanzado con filtros de tiempo, dimensionales, calibración de sensibilidad y persistencia. Además, se puede integrar con VCA Light.

Además, gracias al algoritmo de enmascaramiento de privacidad patentado, las áreas borrosas también se pueden eliminar del video grabado.

Mapas

Con los Mapas de Arteco que emplea la geolocalización de los dispositivos instalados, es posible obtener una verificación rápida de los eventos y el área monitoreada.

Opcionales

Arteco Everywhere – Server Failover - Contact ID - LPR - Open Connector Security Connector – Videowall – Access Control Connector

REQUISITOS DE SISTEMA

Hardware

MINIMUM REQUIREMENTS

CPU Desktop: Intel® Core i3® 7th generation o superior

CPU Server: Intel® Xeon® Bronze series o superior

RAM: 8 GB o superior

LAN: 1x Gigabit Ethernet Network Interface Card

SUGGESTED REQUIREMENTS

CPU Desktop: Intel® Core i5® 9th generation o superior

CPU Server: Intel® Xeon® Silver series o superior

RAM: 16 GB o superior

LAN: 1x Gigabit Ethernet Network Interface Card

64 bit OS Compatibility

Windows 11


Windows 10 Pro or Enterprise

Windows Server 2016

Windows Server 2019 (including Essentials version)

Windows Server 2022



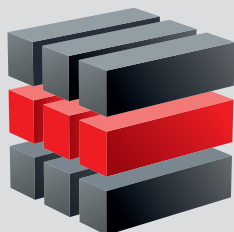

● standard ○ optional – not available

		Pure	eMotion	Active	Extreme
Server Features	License Mix	—	○	○	○
	Max Number of supported cameras per server	20	unlimited	unlimited	unlimited
	Max Number of supported servers	1	3	unlimited	unlimited
	Max Number of simultaneous connections (client, mobile, web)	5	unlimited	unlimited	unlimited
	Max Number of users	unlimited	unlimited	unlimited	unlimited
	Authentication with Microsoft Active Directory	●	●	●	●
	Manage via Omnia Web client	●	●	●	●
	PTZ Control (incl. presets&sequences)	●	●	●	●
	Multi Camera Playback (simultaneous playback of more than one camera)	●	●	●	●
	Instant Replay	●	●	●	●
	Event Notification	●	●	●	●
	Event Search	●	●	●	●
	Substream Support (Live&Recording)	●	●	●	●
	Audio IN (audio in support Live&Rec, Axis + Onvif)	●	●	●	●
	Virtualization (upon request)	●	●	●	●
	Streaming Recoder (hardware decoder @low-res)	—	●	●	●
	Web Device (embedded browser)	—	●	●	●
	External I/O + Input External State (receive and send HTTP/CGI scripts)	—	●	●	●
	Record to network storage (NAS, SAN...)	—	●	●	●
	Privacy Mask (blurred image, removable from recorded video by admin user)	—	●	●	●
	Maps Supervisor	—	●	●	●
	Customization of user right to access specific cameras (Camera Selection)	—	●	●	●
	Customization of user role rights (User Policies)	—	●	●	●
	RTSP Streaming Output (recoding and sending of video streams from the VMS to third parties)	—	—	●	●
	Edge Storage	—	—	●	●
	Audio IN/OUT (Live&Rec audio in and out management, available for ONVIF devices only)	—	—	●	●
	Videowall	—	○	○	●
	Server Failover (Server Redundancy)	—	—	○	●
	Storage Failover (min 2 disks required; in case of disk failure, the system redirect recordings on a pre-configured disk portion, SPARE)	—	—	—	●
	Auxiliary Path (simultaneous recording on 2 storage paths)	—	—	—	●
Analytics	Motion Detection Pure (on/off)	●	●	●	●
	Motion Detection eMotion (Basic filters)	—	●	●	●
	Smart Search	—	●	●	●
	Motion Detection Active (Advanced filters)	—	—	●	●
Plug In	Arteco Everywhere Integration	●	●	●	●
	VCA light	—	—	○	○
	VCA with smart search	—	—	—	○
	LPR Server	—	○	○	○
	LPR - Support for LPR native cameras (Tattile, Selea,...)	—	○	○	○
	LPR - Support for Hikvision LPR and Targa System cameras (requires Arteco Gateway)	—	○	○	○
	LPR - Hanwha Wisenet App (also available as stand alone)	—	○	○	○
	Open Connector	—	●	●	●
	Security Connector	—	○	○	○
	Access Control Connector	—	○	○	○