


DYNACOLOR AND DYNACOLOR OEM ARE UNABLE TO BE VIEWED IN ARTECO-LOGIC NEXT

TECH TIP

DESCRIPTION: This Tech Tip is if you have a Dynacolor or Dynacolor OEM camera that is not pulling in feed to the ARTECO System.

IMPORTANT: This Tech Tip applies to ARTECO versions **4.0.2.1018 or earlier** and is not intended or advised to be used with any other version of ARTECO Systems.

- 1.) Type in the IP address of your Dynacolor or Dynacolor OEM camera into your internet address bar.
- 2.) Type the User Name and password when prompted.
 - a. The default User Name is: "Admin" and the default Password is: "1234"
- 3.) Go to the streaming tab and make the following changes.

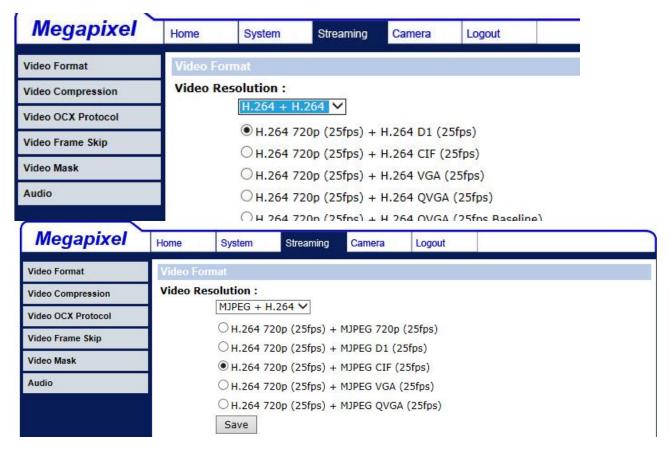

4.) 4.) Click Save and close window.